

588 HIGHWAY 5 WEST DUNDAS, ONTARIO L9H 5E2 OFFICE: 905-628-5611 TOLL FREE: 1-800-263-8503

FAX: 905-628-9292

Watergate Maintenance

The inspection & maintenance details for the Watergate model Storm Water Treatment Chambers are as follows;

Visual inspection of all compartments must be done monthly.

- Oil accumulation that is greater than 300mm thick in any chamber must be removed
- Sediment accumulation that is greater than 300mm deep in any chamber must be removed
- Any floatable debris that has been collected can be removed when Oil and Sediment is removed

All compartments should be completely cleaned once per year. Visual inspection of the internal components (Lamella Plate unit, Outlet baffle) is to be done once a year.

If and when a spill occurs, the oil/contaminant must be removed immediately after it has been contained by the interceptor.

Note: This is a guide for regular maintenance of the Watergate, the frequency of these inspections/cleanings will change depending on the amounts of contaminants that are collected. These inspections/cleanings are the responsibility of the owner who must ensure that the Watergate is properly maintained at all times.

Please contact the factory if you have any questions.

Sincerely

Matt Wilkinson

President

Wilkinson Heavy Precast Ltd.

27 h/.