



588 HIGHWAY 5 WEST
DUNDAS, ONTARIO L9H 5E2
OFFICE: 905-628-5611
TOLL FREE: 1-800-263-8503
FAX: 905-628-9292

Interceptor Maintenance

The inspection & maintenance details for Three Compartment Oil/Sediment Interceptors are as follows;

Visual inspection of all three (3) compartments must be done monthly.

- **Oil accumulation that is greater than 300mm thick in any chamber must be removed**
- **Sediment accumulation that is greater than 300mm deep in any chamber must be removed**
- **Any floatable debris that has been collected can be removed when Oil and Sediment is removed**

All three (3) compartments should be completely cleaned once per year. Visual inspection of the internal components (Trash racks, Elbows, etc.) is to be done once a year.

If and when a spill occurs, the oil/contaminant must be removed immediately after it has been contained by the interceptor.

Note: This is a guide for regular maintenance of the Interceptor. Frequency of these inspections/cleanings will change depending on the amounts of contaminants that are collected. These inspections/cleanings are the responsibility of the owner who must ensure that the Interceptor is properly maintained at all times.

Please contact the factory if you have any questions.

Sincerely

A handwritten signature in black ink, appearing to read 'Matt Wilkinson', is written over a light blue horizontal line.

Matt Wilkinson

President

Wilkinson Heavy Precast Ltd.